

WEEKLY PROGRAMMABLE ELECTRONIC TIMER

Weekday Display

6 Sets ON/OFF Display

Time Setting

Weekday Setting

Program Entry/Recall

Delet/Recall



Time/Response Time

LOCK ON / AUTO / LOCK OFF Display

Minutes Setting

Hours Setting

Reset

LOCK ON / AUTO / LOCK OFF Selectable

INSTRUCTION:

(I) PUSH BUTTON FUNCTION:

- (1) : Clock Indication.
- (2) D : Day Reset.
- (3) H : Hour Reset.
- (4) M : Minute Reset.
- (5) PROG: 6 Sets Of Programmable ON-OFF Settings, Display 1 ON, 1 OFF ••• 6 ON, 6 OFF.
- (6) D/R : Delete/Recall.
- (7) : LOCK ON/AUTO/LOCK OFF Selectable.

(II) CLOCK SETTING:

- (1) Press " " And " D " Together Till Correct Date Is Shown.
- (2) Press " " And " H " Together Till Correct Hour Is Shown.
- (3) Press " " And " M " Together Till Correct Minute Is Shown.

(III) TIMER SETTING:

- (1) Press "PROG" (Timer 1st On Mode).
- (2) press "D" Stop At Requested Date (10 Different Mode: ①MO ②TU ③WE ④TH ⑤FR ⑥SA ⑦SU ⑧MO TU WE TH FR ⑨SA SU ⑩MO TU WE TH FR SA SU Selectable)
- (3) Press "H" Stop At Requested Hour.
- (4) Press "M" Stop At Requested Minute.
- (5) Press "PROG" (Time 1st Off Mode).
- (6) Repeat 2-4.
- (7) Repeat 1-6 Till Timer 6th OFF Mode Is Setted.
- (8) You May Press "PROG" For Double Checking.
- (9) Press " " To "AUTO" For Initial Timer.
- (10) Press " " To Resume Present Time.

(V) Turn On Appliance, Timer Should Be At "AUTO" Mode.

(VI) Press " ", LCD Display "LOCK ON" ⇌ "AUTO" ⇌ "LOCK OFF" For Manual Operation. Stop At "AUTO" For Automatic Operation.

(VII) For Cancel Engagements, Press "D/R" Then "-- --" Is Displayed On LCD To Confirm Cancel. May Press "D/R" Again To Resume Initial Setting.


Stop At "AUTO" For Automatic Operation.

(VII) For Cancel Engagements, Press "D/R" Then "-- --" Is Displayed On LCD To Confirm Cancel. May Press "D/R" Again To Resume Initial Setting.

NOTE:

- (1) For "ON/AUTO/OFF" Function, Only The "AUTO" Position Can Operate Automatically According To The Programmable Setting. If The LCD Displays "LOCK ON", The Device Will Keep "ON", And Will Not Be Automatically "OFF". If "LOCK OFF" Displays, It Will Keep "OFF" Continuously And Not "ON".
- (2) The power Consumption Of Connected Electrical Appliances Shall Be Within The Limitation.
- (3) A Reset Of The Time Switch Is Necessary Before Setting.
- (4) As This Time Switch Include Ni-Cd Battery, So Recharge The Battery For 10 Minutes Is Necessary If The LCD Display Is Not Clear Or Disappear. Also A Reset Of The Timer Switch Is Necessary.

CONTROL OUTPUTS & CONNECTIONS

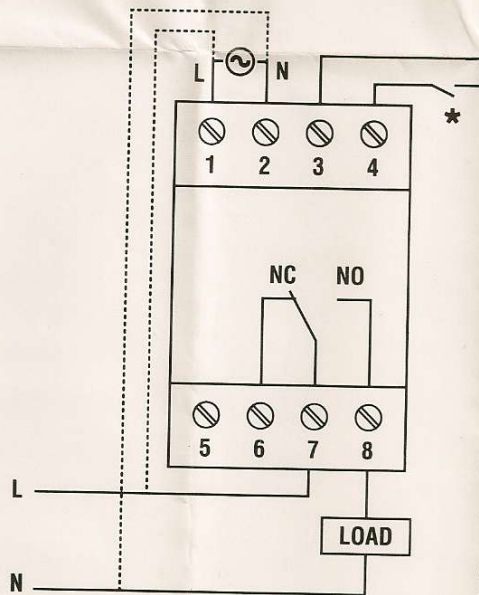

* Terminal 3 And 4 Can Be External With Switch. When You Need Timer To Be Turned On At any Time, You Can Turn On The Switch. If You Want To Resume The Pre-Setting Function, You Have To Turn OFF The Switch Of Terminal 3 And 4.

CAUTION :

In spite of an internal safety control, unusual strong noise fields could cause a disturbance of the microprocessor-controlled time switch.

Interference can be avoided if the following details are considered during installation:

- The device should not be installed close to inductive consumers.
- There has to be laid a separate line for the mains supply (if necessary mains suppression filter)
- Inductive consumers should have to be interference suppressed (varistor, RC-section)

After having cleared the interference, a reset of the time switch is necessary.